Printer Name TM-H6000V

Printer Firmware Version 30.11A ESC/POS

Main : 30.11 Network : 02.02 TM-i : 01,16

SERIAL No. X5FX025119

USB Interface or other

Ethernet Interface 20 191089

MAC Address : F8-D0-27-C5-95-7E : (None)

Subnet Mask : (None) Default Gateway: (None)

Buffer Capacity 4K bytes

Handshaking Operation (busy condition) Offline or receive buffer full

Automatic Line Feed (CR command function) Disable

Customer Display Not Available man tologs

Resident Character Alphanumeric

Print Density LIGHT [1 2 3] DARK

Installed device

MICR unit .: Installed Endorse Printer unit : Installed Validation unit :Not installed

Recovery Point Factory

Maintenance Information

Therma! Head : 0.001 km 23 cuts Autocutter Impact Head(Slip) : 23 ch Impact Head(Endorse):

MICR Head

DIP Switch 1 12345678

DIP Switch 2 12345678

Mode Selection

Modes

- 0: Exit and Reboot Printer
- 1: NV Graphics Information
- 2: Receipt Enhancement Information
- 3: Customize Value Settings/
- 4: Restore Default Values
- 5: Interface Setup
- 6: TM-Intelligent Information
- 7: Peripheral Device Information
- 8 or more: None

Select Modes by executing following procedure.

step 1. Press the Feed button less than 1 second as many times as the selected mode number

step 2. Press Feed button for 1 second or more.

Customize Value Settings

Modes

- 0: Exit
- 1: Print Current Settings
- 2: Print Density
- 3: Print Speed
- 4: Automatic Paper Reduction
- 5: Auto Paper Feed&Cut at cover close
- 6: Paper Width
- 7: Character/Font Settings
- 8: Interface Selection 9
- 9: Interface Settings
- 11: Command Execution (Offline)
- 12: Power Supply Output
- 13: Other Settings

Select Modes by executing following procedure. A lange

step 1. Press the Feed button less than 1 second as many times as the selected mode number.

step 2. Press Feed button for 1 second or more.

776 chi 8.Interface Selection

3 shi

- O: Return to the previous menu
- 1: UIB A composid ansa 2: Built-in USB /
 - 3: Ethernet/Wi-Fi
 - 4: Auto
-]*5: Multiple
-] means default value.
- * means current set value.

8. Interface Selection Built-in USB

Saved. You can turn off the printer.

Modes

- 0: Exit
- 1: Print Current Settings
- 2: Print Density
- 3: Print Speed
- 4: Automatic Paper Reduction
- 5: Auto Paper Feed&Cut at cover close
- 6: Paper Width
- 7: Character/Font Settings
- 8: Interface Selection
- 9: Interface Settings
- 11: Command Execution (Offline)
- 12: Power Supply Output
- 13: Other Settings

Select Modes by executing following procedure.

step 1. Press the Feed button less than 1 second as many times as the selected mode number.

step 2. Press Feed button for 1 second or more.



Modes

- 0: Exit and Reboot Printer
- 1: NV Graphics Information
- 2: Receipt Enhancement Information
- 3: Customize Value Settings
- 4: Restore Default Values
- 5: Interface Setup
- 6: TM-Intelligent Information
- 7: Peripheral Device Information
- 8 or more: None

Select Modes by executing following procedure.

step 1. Press the Feed button less than 1 second as many times as the selected mode number.

step 2. Press Feed button for 1 second or more.

completed ***



