## MAGELLAN™ 9300/9400i

## **SCALE ZERO BUTTON KIT**

KIT CONTENTS		
Scale Zero Button (740335500)	1	
2-Meter Cable (90A052335)	1	
This Instruction Sheet with Programming Label	1	

## Installation

- Power Down the Scanner-Scale.
- Attach the Scale Zero Button via the supplied 2M cable.
  Plug the yellow marked end to the scanner "Aux Port," the other end to the Scale Zero Button Box as shown.
- 3. Power the Scanner-Scale on.
- 4. After Power-up is complete, scan the Start/End Label at the top of page, then scan the label below:



Rescan the Start/End Label to complete the programming sequence. The Remote Scale Zero button is now enabled, and the Zero button on the scanner's front panel is disabled (the front Control Panel Zero Button will be disabled in this mode).


- Test the Scale Zero Button after the scanner-scale has rebooted from the label programming by doing the following:
- Observe that the Scale Zero LED is "on"
- Place an item of less than 50 grams (2 oz.) on the scale
- Observe that the Scale Zero LED is "off"
- Press the Scale Zero Button and observe that the Scale Zero LED comes back on and the scale display shows "0.00"
- Remove the item and see that the Scale Zero LED goes off
- With the platter empty, press the Scale Zero Button to return the scale to zero (light on)







When activating the Remote Zero Button, the front Scale Zero LED will go off and will light when scale is at zero.

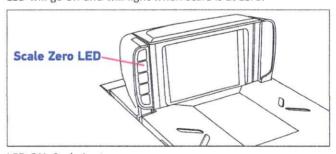

LED ON: Scale is at zero. LED OFF: Scale is not at zero.

© 2020 Datalogic S.p.A. and its Group companies • All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.





820116100 ( Rev. A) February 2020